


Notes:

1. Mechanically prepare concrete surfaces in accordance with ICRI Guideline No. 310.2R-2013 to achieve a concrete surface profile of CSP-3 or higher, or in accordance with manufacturer's requirements.
2. Remove existing joint sealant and backing materials, and mechanically prepare joint wall substrates per the sealant manufacturer's recommendations.
3. Expansion joint must be a minimum of ¼" X ¼".
4. Install Miracote Miraflex Membrane C in accordance with specifications and the manufacturer's installation guidelines.
5. Install Miracote BC Pro in accordance with specifications and the manufacturer's installation guidelines.
6. Sealant must be twice the width as the depth up to ½".
7. Tool flush and sprinkle oven dried sand immediately into sealant surface while wet.
8. Selected sealant must be rated for submersion.

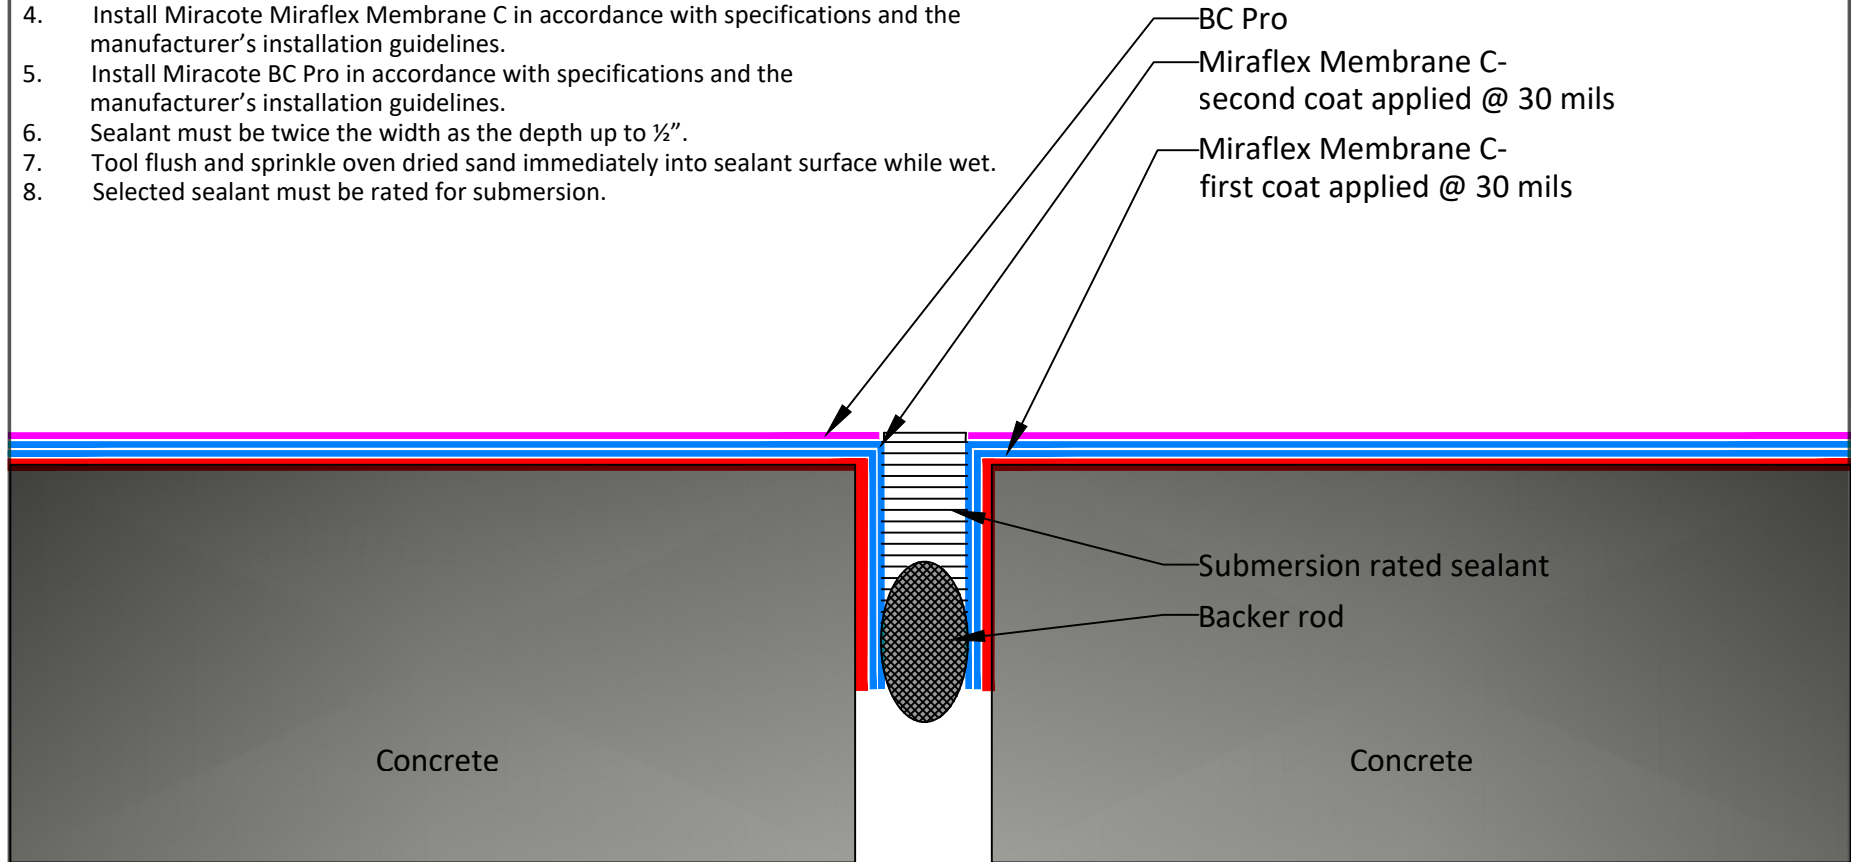

Concrete surface preparation

- Concrete surface preparation of CSP-3 or higher

Miraflex Membrane C

BC Pro

- Application rate at 30 mils depending upon surface and texture requirements

MIR-MEMC-PPF-EJD-2

4/19/20

NTS

EXPANSION JOINT DETAIL
Pool Plaster Finishes

