


**Notes:**

1. Mechanically prepare concrete surfaces in accordance with ICRI Guideline No. 310.2R-2013 to achieve a concrete surface profile of CSP-3 or higher, or per manufacturer's requirements.
2. Install cant bead of CPC Hybrid Sealant at vertical transition. Tool flush/sprinkle oven dried sand immediately into sealant surface while wet. \*\*Sand may be omitted if Membrane C is applied directly to CPC Hybrid Sealant while it is wet.\*\*
3. Install Miracote Miraflex Membrane C in accordance with specifications and manufacturer's installation guidelines.
4. Install Miracote BC Pro in accordance with specifications and manufacturer's installation guidelines.

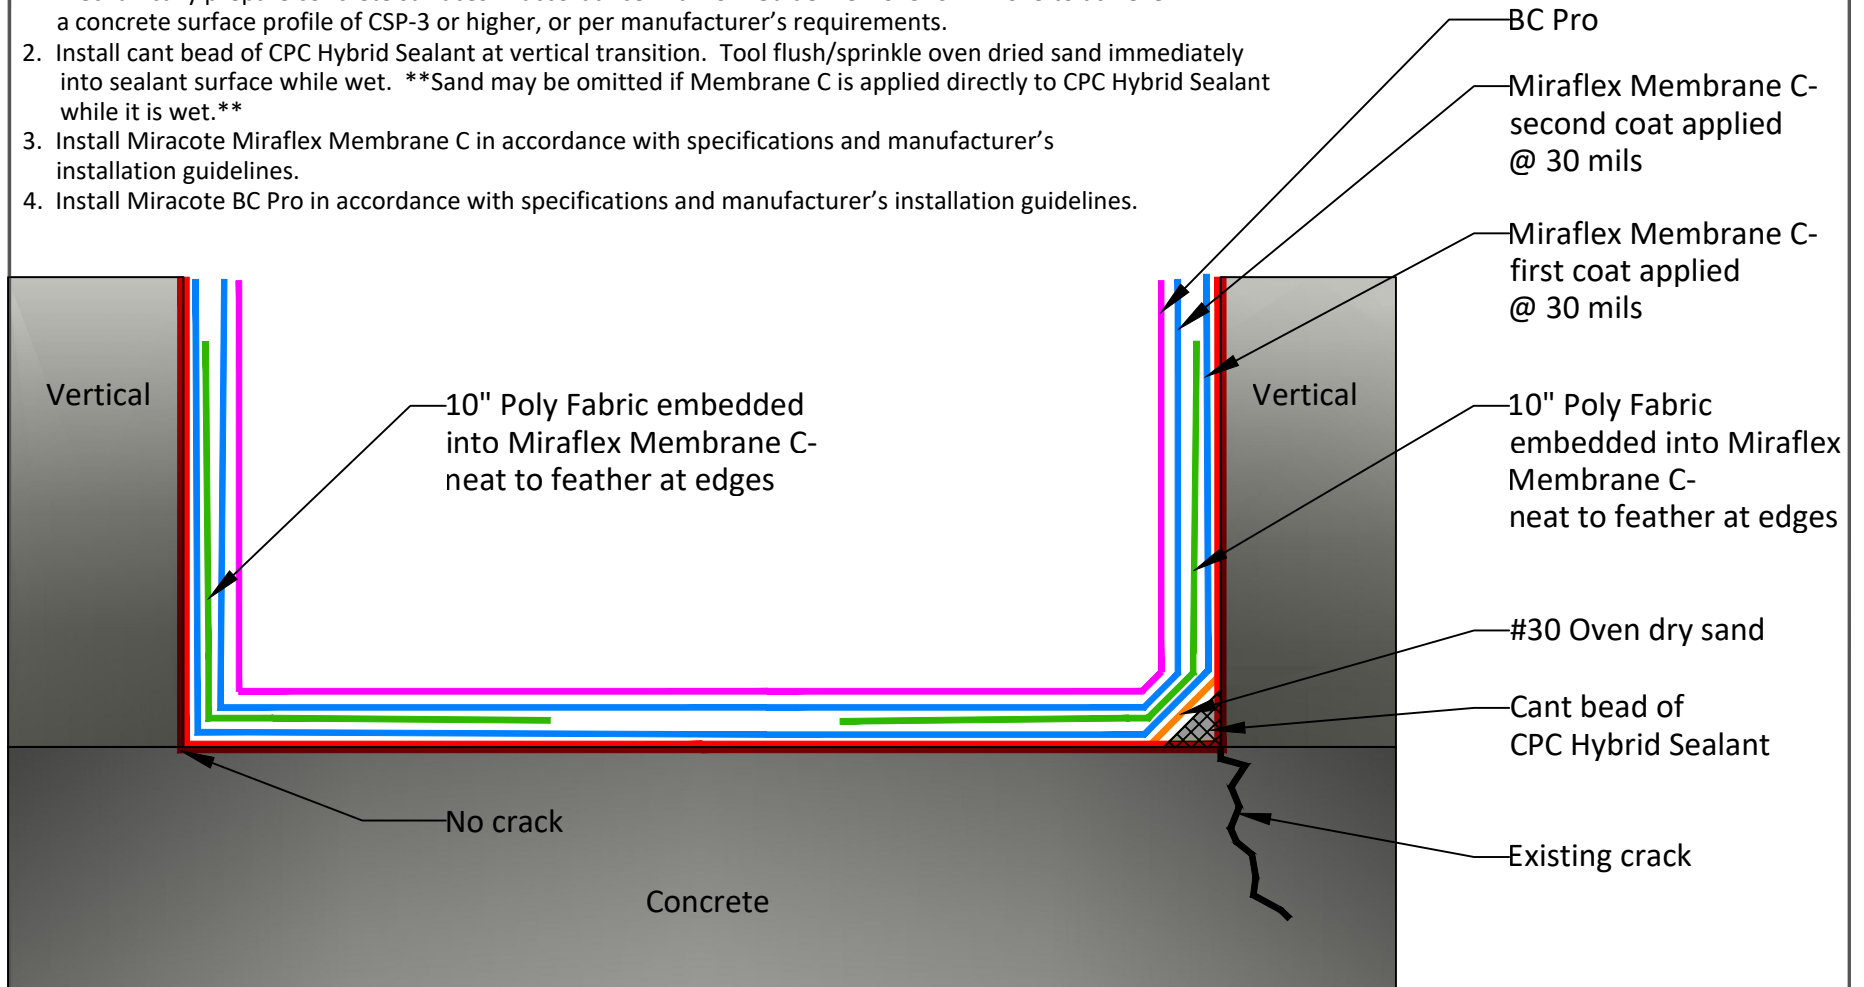

**Concrete surface preparation**

- Concrete surface preparation of CSP-3 or higher

**#30 Oven dry sand**

**Miraflex Membrane C**

**10" Poly Fabric embedded into**

**Miraflex Membrane C**

**BC Pro**

- Application rate at 30 mils depending upon surface and texture requirements

MIR-MEMC-PPF-CPD-2

4/12/20

NTS

CHANGE IN PLANE DETAIL  
Pool Plaster Finishes

