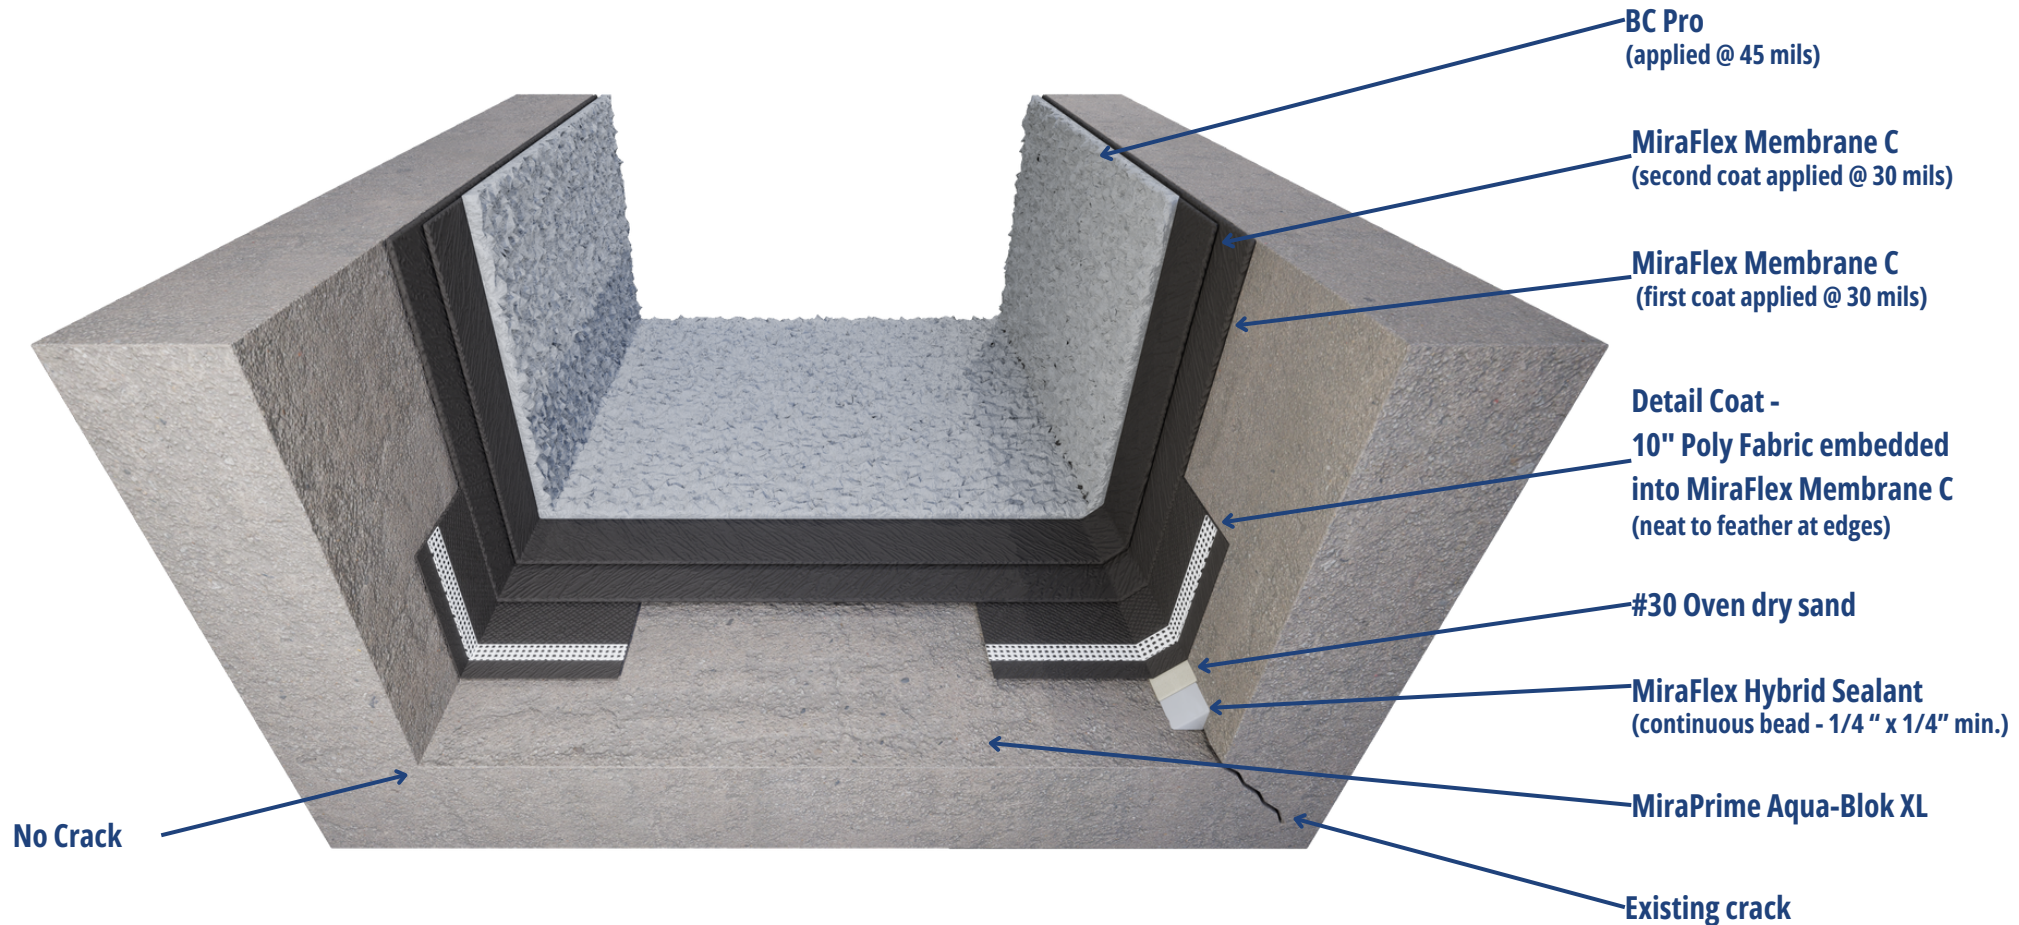


WATERSHAPES DETAIL**POOL PLASTER FINISH - CHANGE IN PLANE**

THESE DETAILS ARE FOR REFERENCE ONLY AND MUST BE REVIEWED BY A DESIGN PROFESSIONAL

NOT TO SCALE

**Notes:**

1. Mechanically prepare concrete surfaces in accordance with ICRI Guideline No. 310.2R-2013 to achieve a concrete surface profile of CSP-3 or higher.

2. Install cant bead of MiraFlex Hybrid Sealant at vertical transition. Tool flush/sprinkle oven dried sand immediately into sealant surface while wet.

****Sand may be omitted if Membrane C is applied directly to MiraFlex Hybrid Sealant while it is wet.****

3. Install Miracote MiraFlex Membrane C in accordance with specifications and manufacturer's installation guidelines.

4. Install Miracote BC Pro in accordance with specifications and manufacturer's installation guidelines.