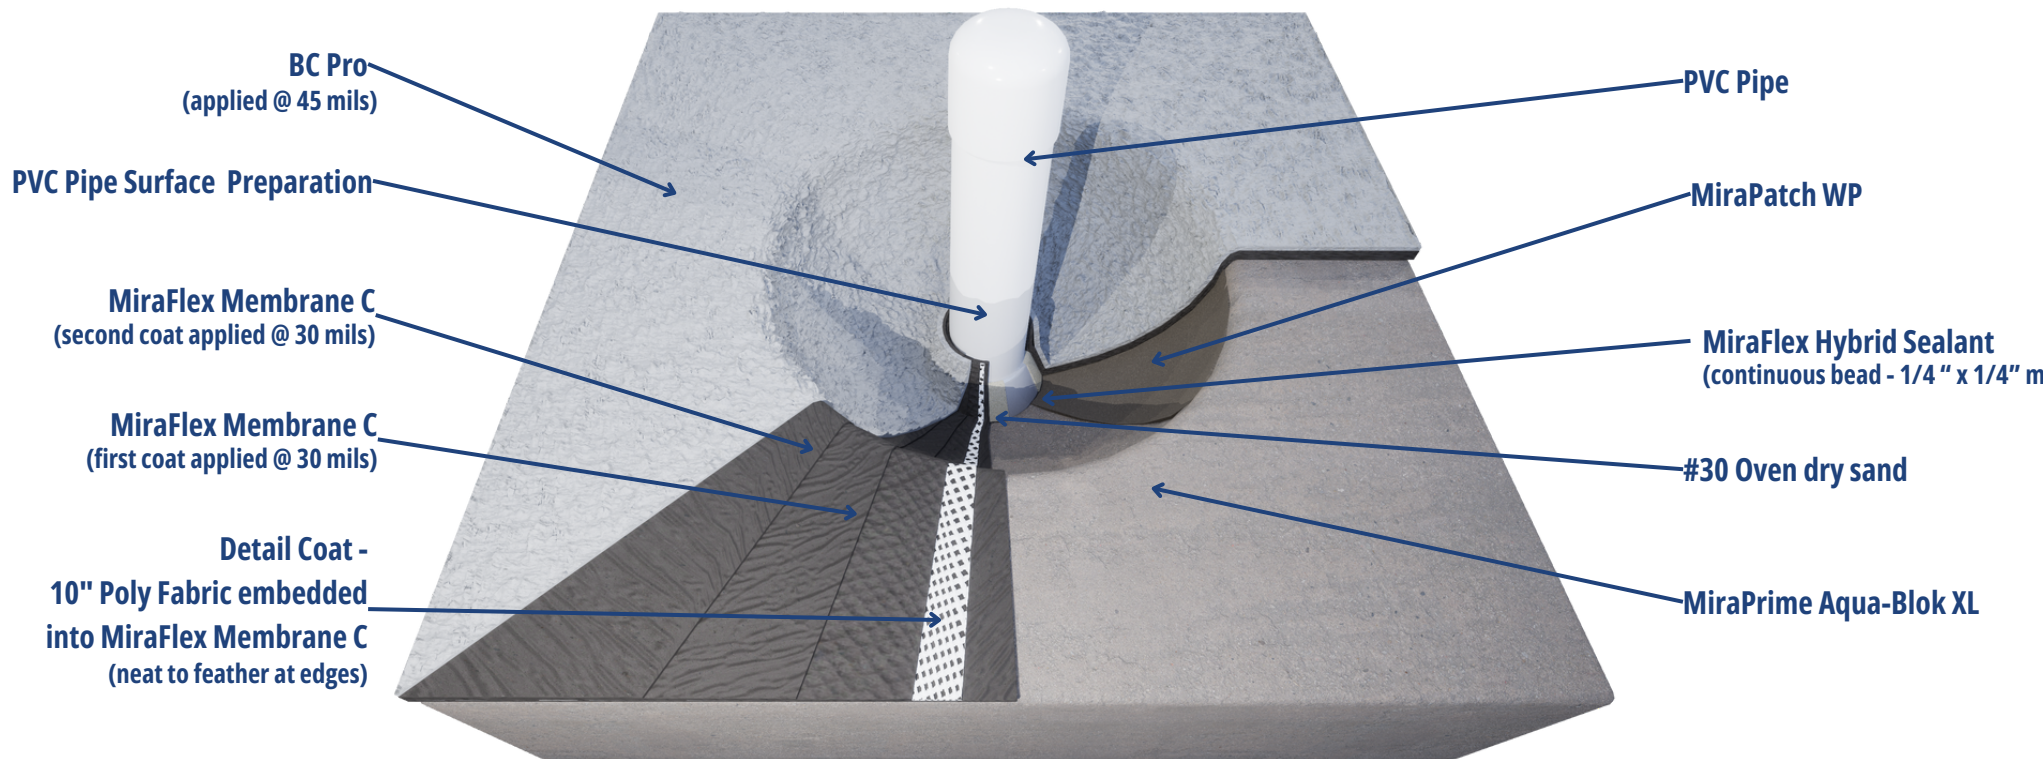


WATERSHAPES DETAIL**POOL PLASTER FINISH - PIPE PENETRATION**

THESE DETAILS ARE FOR REFERENCE ONLY AND MUST BE REVIEWED BY A DESIGN PROFESSIONAL

NOT TO SCALE

**Notes:**

1. Chip existing substrate around pipe.
2. Fill irregularities in void with MiraPatch WP or MiraPatch Mortar Bed 2000 as needed.
3. PVC pipe surface preparation - PVC must be clean and abraded prior to sealant.
4. Cant bead of MiraFlex Hybrid Sealant.
5. #30 oven dry sand. **Sand may be omitted if Membrane C is applied directly to MiraFlex Hybrid Sealant while wet.
6. Detail coat: 10" Poly Fabric embedded into MiraFlex Membrane C - cut a "cross" in the middle of the Poly Fabric to place over pipe.
7. MiraFlex Membrane C - First coat applied at 30 mils.
8. MiraFlex Membrane C - Second coat applied at 30 mils.