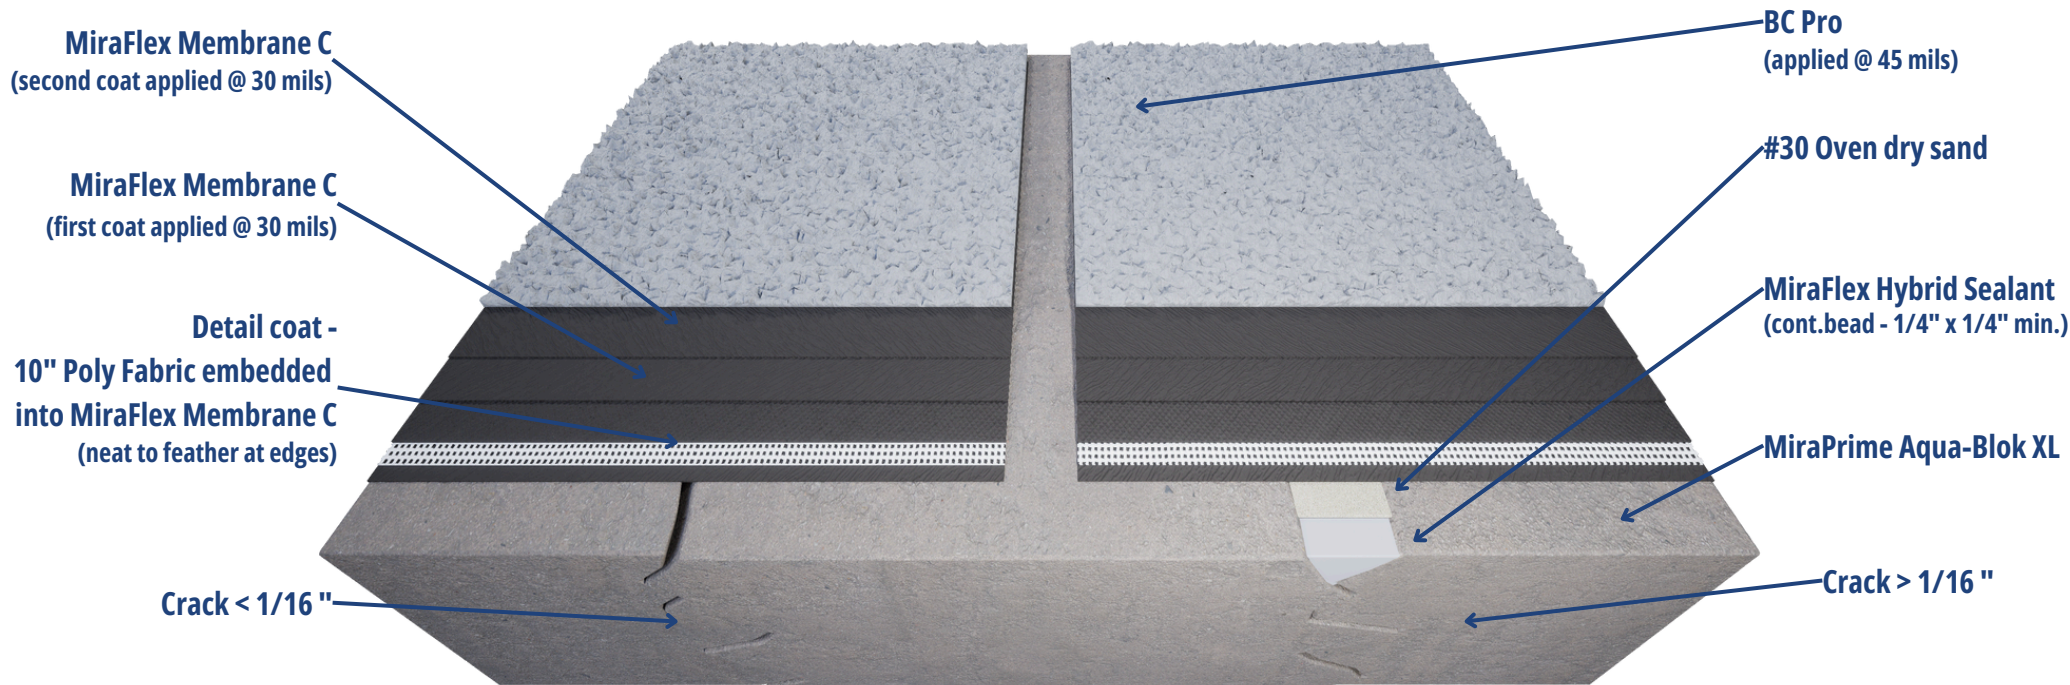


WATERSHAPE DETAIL
POOL PLASTER FINISH - CRACK TREATMENT

THESE DETAILS ARE FOR REFERENCE ONLY AND MUST BE REVIEWED BY A DESIGN PROFESSIONAL

NOT TO SCALE


Notes:

1. Mechanically prepare cracks $>1/16''$ width, per manufacturer's requirements.
2. Mechanically prepare concrete surfaces in accordance with ICRI Guideline No. 310.2R-2013 to achieve a concrete surface profile of CSP-3 or higher.
3. Seal routed cracks with MiraFlex Hybrid Sealant. Tool flush and sprinkle oven dried sand immediately into sealant surface while wet.
 Sand may be omitted if Membrane C is applied directly to MiraFlex Hybrid Sealant while it is wet.
4. Apply detail coat of Miracote Poly Fabric embedded into MiraFlex Membrane C, per manufacturer's installation guidelines, cracks over $1/16''$, cold joints and all routed cracks previously sealed with MiraFlex Hybrid Sealant. MiraFlex Membrane C detail coat(s) shall extend 4" minimum on each side of crack.
5. Install Miracote MiraFlex Membrane C in accordance with specifications and the manufacturer's installation guidelines.
6. Install Miracote BC Pro in accordance with specifications and the manufacturer's installation guidelines.