


**Notes:**

1. Mechanically prepare concrete surfaces in accordance with ICRI Guideline No. 310.2R-2013 to achieve a concrete surface profile of CSP-3 or higher, or per manufacturer's requirements.
2. Install cant bead of CPC Hybrid Sealant at vertical transition. Tool flush/sprinkle oven dried sand immediately into sealant surface while wet. \*\*Sand may be omitted if Membrane C is applied directly to CPC Hybrid Sealant while it is wet.\*\*
3. Install Miracote Miraflex Membrane C in accordance with specifications and manufacturer's installation guidelines.

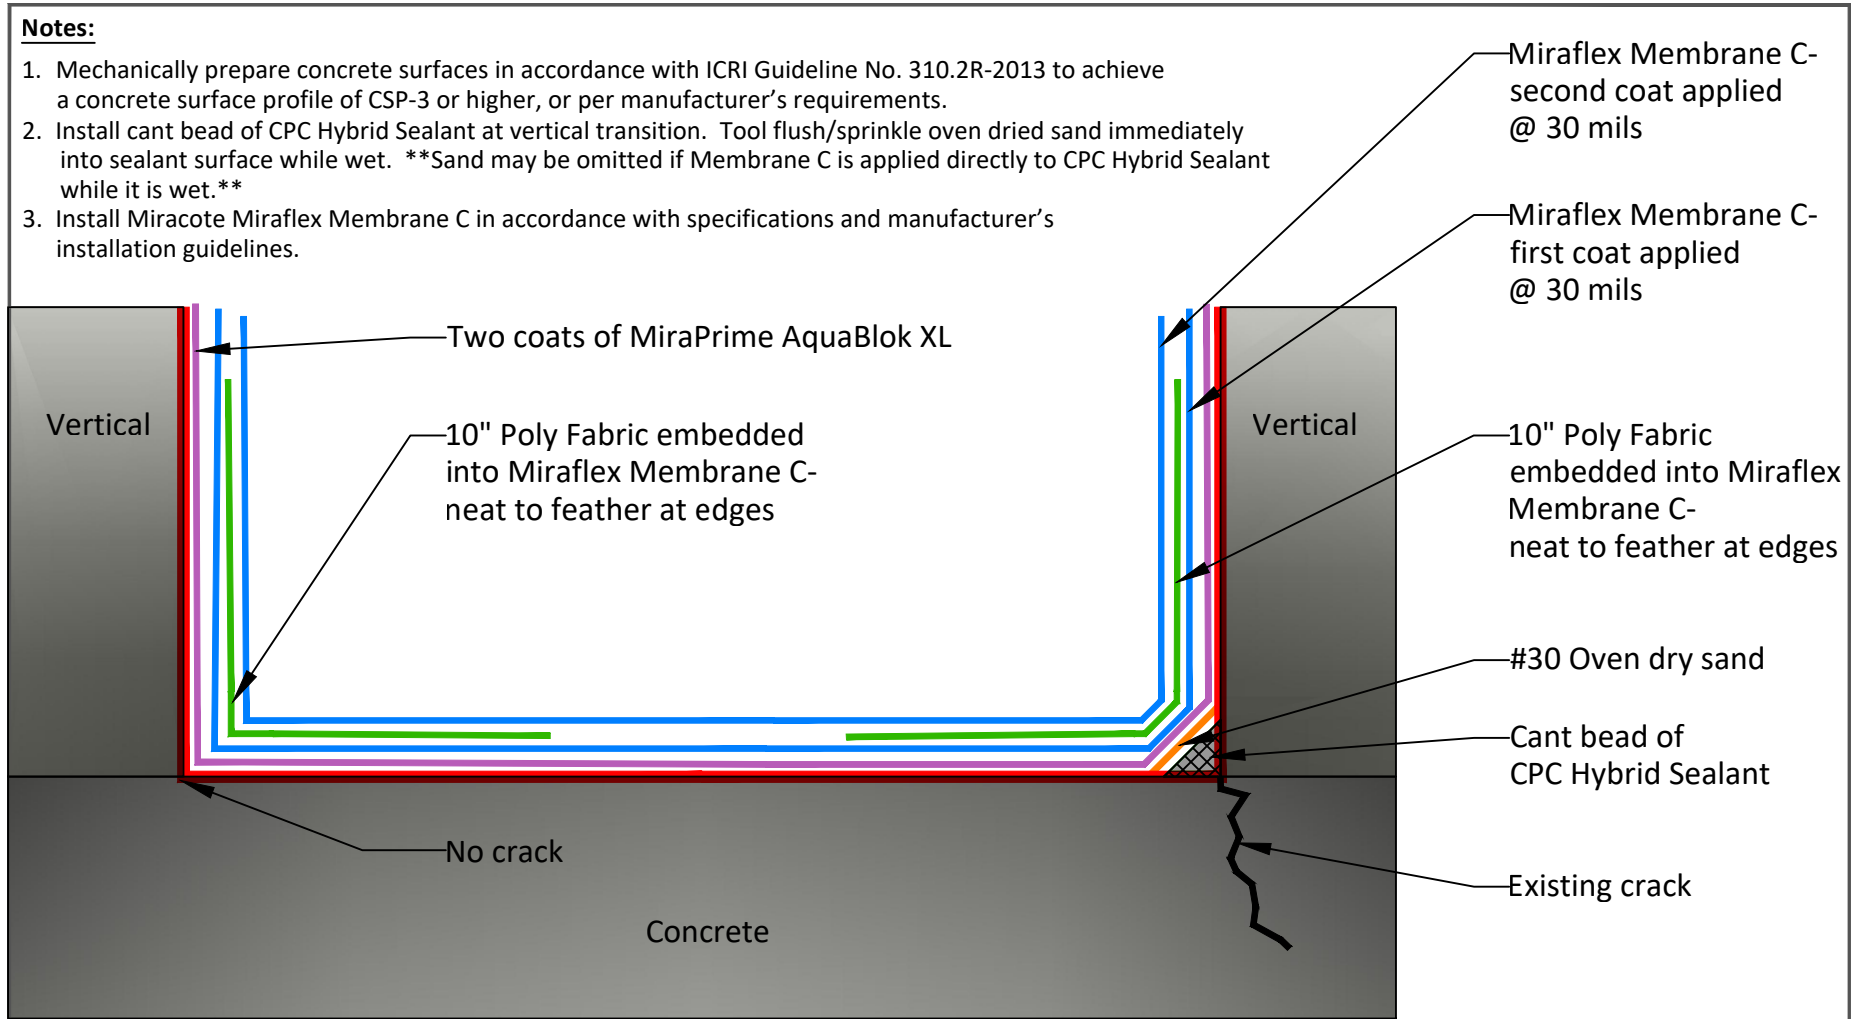

**Concrete surface preparation**

- Concrete surface preparation of CSP-3 or higher

**MiraPrime AquaBlok XL**

**#30 Oven dry sand**

**Miraflex Membrane C**

**10" Poly Fabric embedded into Miraflex Membrane C**

|               |     |   |  |
|---------------|-----|---|--|
| MIR-MEMC-CPD1 |     | CHANGE IN PLANE DETAIL<br>Miraflex Membrane C | <br>Division of Crossfield Products Corp. |
| 4/12/20       | NTS |   |  |