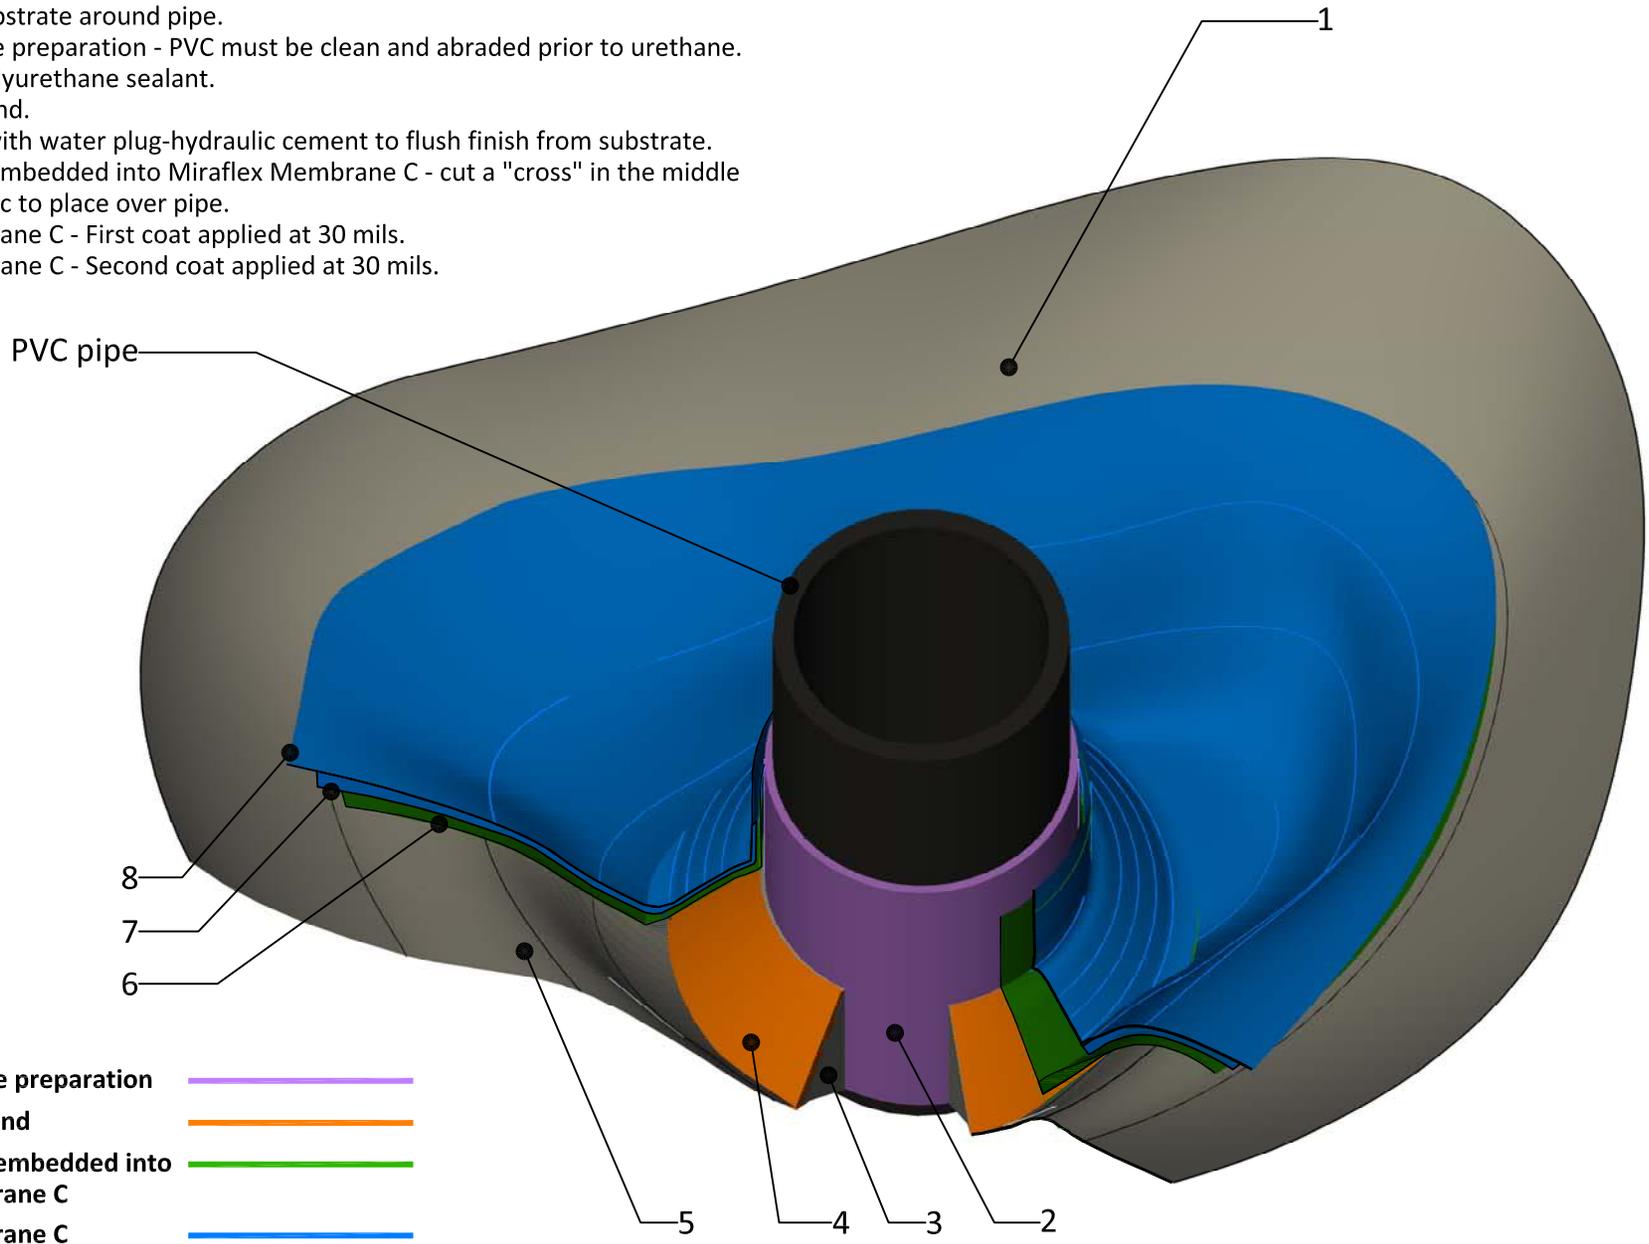**Notes:**

1. Chip existing substrate around pipe.
2. PVC pipe surface preparation - PVC must be clean and abraded prior to urethane.
3. Cant bead of polyurethane sealant.
4. #30 oven dry sand.
5. Fill entire void with water plug-hydraulic cement to flush finish from substrate.
6. 10" Ploy fabric embedded into Miraflex Membrane C - cut a "cross" in the middle of the Poly Fabric to place over pipe.
7. Miraflex Membrane C - First coat applied at 30 mils.
8. Miraflex Membrane C - Second coat applied at 30 mils.

1

PVC pipe

8
7
6

5   4   3   2

PVC pipe surface preparation

#30 Oven dry sand

10" Poly Fabric embedded into
Miraflex Membrane C

Miraflex Membrane C

MIR-MEMC-PD1		PIPE DETAIL	MIRACOTE
1/02/2014	NTS	Miraflex Membrane C	Division of Crossfield Products Corp.